
 


EXCESS FLOW PROTECTOR IN-LINE SERIES

Female Pipe x Male Pipe

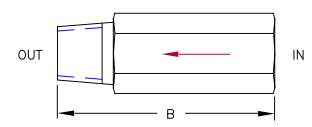




(Arrow indicates direction of closing flow)


SPECIFICATIONS

P =								
Туре	In—line excess flow protector (hose break valve)	Closing Flow	Preset by factory to customer specified value (Tolerance: +20%/-0%)					
Operation	Shuts off flow if it exceeds the preset rate and then allows flow at a low rate. Remains closed until pressure is equalized. Free reverse flow.							
		Max. Pressure	3,000 psi					
		Press. Differential	50 to 100 psi					
		Fluid	General hydraulic fluid					
Material	All steel construction		Í					
	Black oxide finish	Operating Temp.	Not Applicable					
Rated Flow	Up to 45 apm	Seals	Not Applicable					

DIMENSIONS

1						
	Model	Inlet	Outlet	Flow Range	A Hex	В
4(02-02-XX	1/4 NPT	1/4 NPT	.5 — 8 GPM	3/4	2.90
4(02-03-XX	3/8 NPT	3/8 NPT	1 — 20 GPM	7/8	3.25
4(02-04-XX	1/2 NPT	1/2 NPT	2 — 35 GPM	1 1/8	3.30
4(02-06-XX	3/4 NPT	3/4 NPT	2 — 45 GPM	1 3/8	3.70

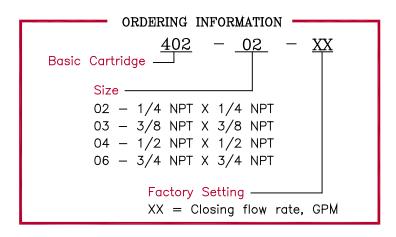

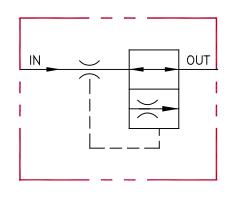

All dimensions in inches